

## PAC10

### On-Demand Full Color Print & Apply Label Applicator For Conveyors

*Designed specifically for use with the Epson® ColorWorks® CW-C6000P on-demand label printers with peel-and-present capabilities, the PAC10 delivers an on-demand, full color print and apply labeling solution **for conveyors and automated environments**. The PAC10 applicator allows your operation to take full advantage of the Epson C6000P built-in label peeling capabilities and concentrate on production rather than label application.*

#### ■ Accuracy, Workflow Efficiency & Safety

The PAC10 delivers high accuracy print and apply label placement every time. The Epson peel-and-present capabilities combined with this automated label applicator ensure a safe and efficient workflow, even when workers are required to wear gloves.

#### ■ Flexibility Makes Full Color Label Application Easy

The PAC10 color label print & apply solution is so easy; all the operator needs to do is place the product on the conveyor. This tabletop-sized unit can print varied label sizes and accurately apply to squares, rectangles, flats or rounds; and is capable of printing multiple sizes and types of labels.

#### ■ Exclusive Features Allow Greater Productivity

Exclusive features such as a tamp shift and flex tamp, along with heavy-duty dual cylinder construction, allow labels to be applied to a wide variety of products. Other unique features include a 5-color light panel that indicates status, a removable printer unit, and easy access to the electrical panel and pneumatics.

#### ■ Intelligent Operations


Automatic setup, with multiple programmable labels for easy changeovers to different types and sizes. Multi-language touch screen operator panel can be used with the General Data SmartTouch Panel for a complete solution. The PAC10 also offers advanced PLC & I/O, as well as USB, Ethernet, Serial, and WiFi connectivity options.



# Product Specifications:

Dimensions: WxDxH	29x18x15.25 (in)   736x457x388 (mm)	Printable Resolution:	Up to 1200x1200 dpi full color
Weight:	95 lbs   43 kg	Air (as needed):	80 psi @ 4 cfm
Voltage:	115 Volts AC 60Hz 8 Amps   220 Volts AC 50Hz 4.0 Amps	Dispense Accuracy:	Up to +/- 1/32" (.8mm)
Label Width:	Up to 4.25" (108 mm) <b>or</b> Up to 8.34" (212 mm)	Label Length:	Up to 12" (178 mm) - Dependent on Tamp Pad
Requirements:	Compressed air, 2-3 CFM, 60 psi	Standard Tamp Pad:	4"x4" (others on request)

Options:	Rolling or fixed stand	Air-blow conversion
	Conveyor side-mounting bracket	Front tamp configuration
	Label on pad detection	Corner wipe-around configuration
	Smart Touch Panel	Custom programming

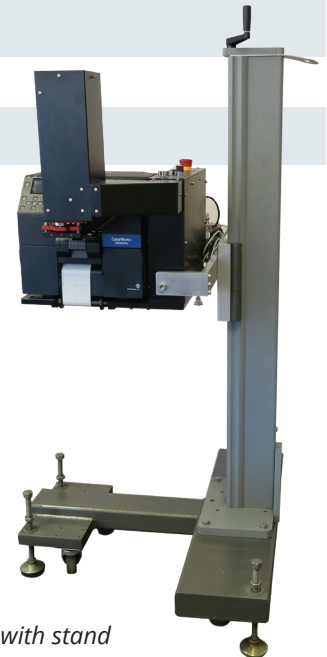

*PAC10 configuration with stand*



**More Information**  
**844.643.1129 | [www.general-data.com](http://www.general-data.com) | [talktous@general-data.com](mailto:talktous@general-data.com)**

©2023 General Data Company, Inc. All rights reserved. Specifications are current at the time of publication; however, they are subject to change without notification. EPSON and ColorWorks are registered trademarks of Seiko Epson Corporation. All other trademarks and registered trademarks are property of General Data Company, Inc., Cincinnati, Ohio, USA.



General Data Company, Inc.  
4354 Ferguson Road, Cincinnati, OH 45245  
844.643.1129

Email: [talktous@general-data.com](mailto:talktous@general-data.com)  
Web: [www.general-data.com](http://www.general-data.com)

Service:  
PH: 800.245.5029  
Email: [customersupport@general-data.com](mailto:customersupport@general-data.com)